

Heat Pump Maintenance Guidelines


1 Your home's climate control relies on a heat pump system that is located inside the home. An internal switch controls its activation. Please refrain from turning it off unless instructed by a qualified service technician. Filters need to be replaced at least quarterly or as needed by the homeowner.

2 Filter Changing Instructions:

Filters need to be replaced at least quarterly or as needed by the homeowner.

1. Open the panel that houses the heat pump.
2. Remove filter from housing.
3. Ensure you are replacing the filter with one that is the correct size.
4. Replace the filter.
5. Close the panel that houses the heat pump.

Heat Pump

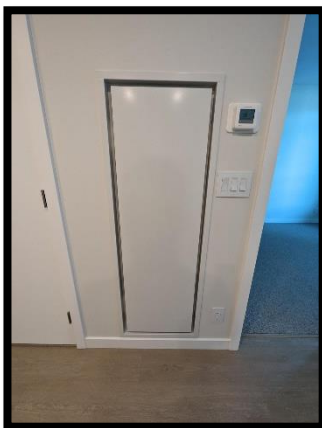

Remove and Replace Filter



Heat Pump Filter



Filter Size (Sizes may vary depending on unit)



Please read these guidelines thoroughly to ensure that you know how to safely and efficiently operate the extensive features and functions of your heat pump. **Refer to the Manufacturer Manual for the full Maintenance and Troubleshooting Steps provided in the Welcome Package.** Thank you for your cooperation!

Washer Operation and Maintenance Guidelines

**GILMORE
PLACE**

1

Detergent Dispenser Usage and Cleaning:

1. Make sure you are using HE (High Efficiency) Detergent for your laundry.
2. To clean the dispenser press the dotted point on the siphon of the softener compartment and pull towards yourself until it is removed.

(Note: Dispenser should be cleaned **minimum once per month** or as required.)

Detergent Dispenser



Look for HE Symbol on Detergent packing



2

Service (Emergency) Drain Usage and Pump Filter Cleaning:


1. Take the hose out from its seat, place container at the edge of the hose and drain the water by pulling a plug at the end of the hose. When done draining the water, close the tube cap, and reinsert the tube.
2. Make a test run of the washer to see if it is not leaking.
3. Turn and remove the pump filter. Then Clean any residues inside of it as well as fibers, if any, around the pump impeller region.

(Note: You should clean the pump filter **5 or 6 times a year** to prevent it from clogging)

Service Drain & Pump Filter



Pump Filter

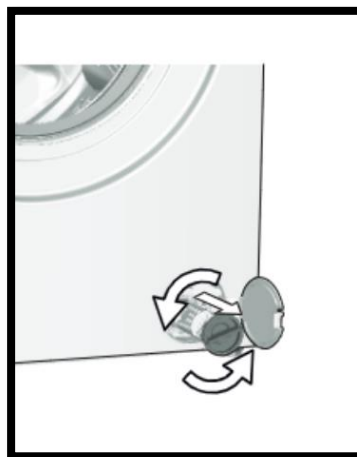


3


General Requirements:

1. The door to the laundry closet must be opened while the appliances are running.
2. After the Washing Session when the laundry is removed, please make sure the Loading Door remains opened.

Keep Loading Door Opened

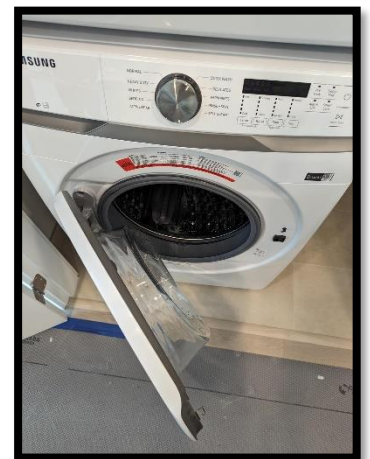

Keep Laundry Door Open

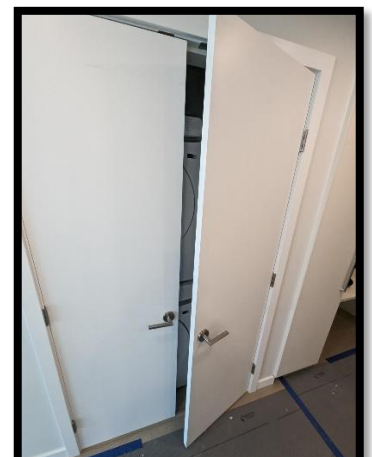

Please read these guidelines thoroughly to ensure that you know how to safely and efficiently operate the extensive features and functions of your new appliance. **Refer to the Manufacturer Manual for the full Maintenance and Troubleshooting Steps provided in the Home Owner Package.** Thank you for your cooperation!

Thermostat Operation Tips


Fan Operation Settings:

1. Press the **Fan** button to cycle to the next available Fan mode.
2. Cycle through the modes until the required Fan mode is displayed and leave it to activate.

Note: Available Fan modes vary with system settings.

Fan modes:

- **Auto:** Fan runs only when the heating or cooling system is on
- **On:** Fan is always on.

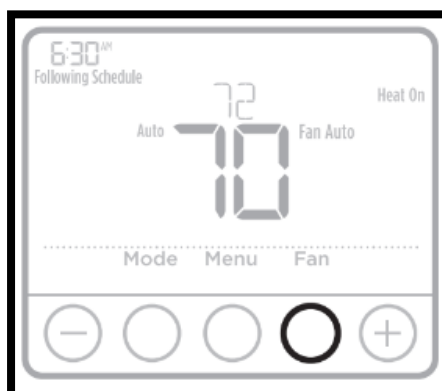


System Operation Settings:

1. Press the **Mode** button to cycle to the next available System mode.
2. Cycle through the modes until the required System mode is displayed and leave it to activate.

Note: Available System modes vary by model and system settings.

System modes:

- **Auto**
- **Heat**
- **Cool**
- **Off**
- **Em. Heat** (TH4210U only)

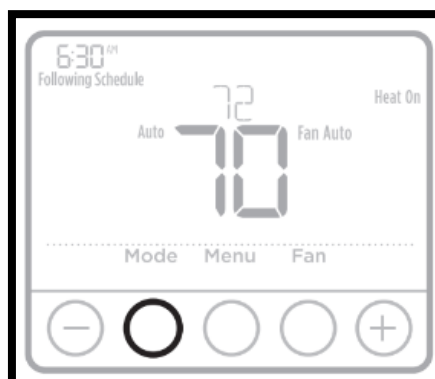

Please read these guidelines thoroughly to ensure that you know how to safely and efficiently operate the extensive features and functions of your new appliance. **Refer to the Manufacturer Manual for the full Maintenance and Troubleshooting Steps provided in the Welcome Package.** Thank you for your cooperation!

Hood Fan Maintenance Guidelines


1 For best results, start the rangehood several minutes before cooking to develop proper airflow. The fan must always be on during the cooking process and should operate for several minutes after cooking is complete to clear all smoke and odors from the kitchen.

2 Grease Filters Cleaning Instructions:

Grease Filter should be cleaned at least **once every 2 months, or more frequently if use is particularly heavy.** Never operate the fan or range oven without the filter in place.

1. Open the visor/tab by pulling it.
2. Remove the filter, pushing the lever towards the back of the unit and at the same time pulling downward.
3. Wash the filter without bending it, leave it to dry thoroughly before replacing it.
4. Replace, taking care to ensure that the handle faces forward.
5. Cleaning in dishwasher may dull the finish of the metal grease filter.
6. Close the visor.


Bottom view

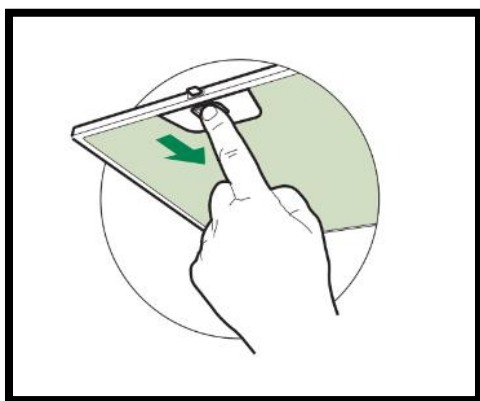


Remove the filter



Rinse well and shake to dry

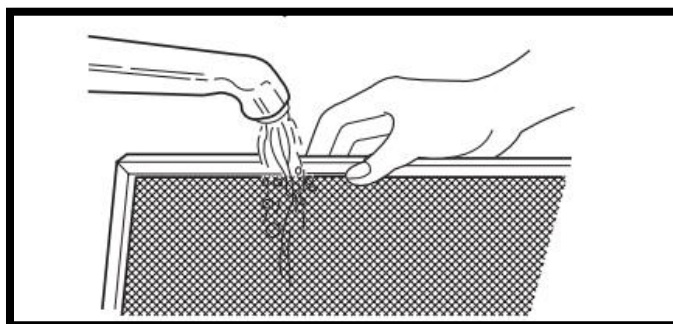

Replace filter after thoroughly dried

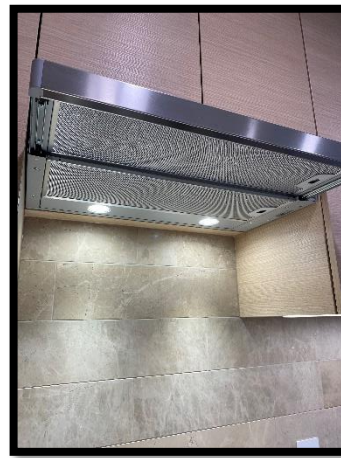

Please read these guidelines thoroughly to ensure that you know how to safely and efficiently operate the extensive features and functions of your new appliance. **Refer to the Manufacturer Manual for the full Maintenance and Troubleshooting Steps provided in the Welcome Package.** Thank you for your cooperation!

Garburator Troubleshooting Tips



Reset Button

-
- Turn breaker off or unplug
 - Remove any/all containments from inside
 - Rotate the bottom turbine ½ “ by using a wooden spoon
 - Hit the reset button on the bottom
 - Plug garburator back in or turn the breaker back on
 - Repeat steps unit it works again

Please remember, your garbage disposal is for soft food **ONLY**. Do not put any hard food wastes down the disposal unit such as **meat, cooking oil, bones, fruit pits, stones etc.**

Thank you for your cooperation!



#200-1010 Seymour Street, Vancouver British Columbia, V6B 3M6

Tel (604) 602-7711 * Fax (604) 668-7907

www.onni.com

Dryer Operation and Maintenance Guidelines

GILMORE
PLACE

Although each dryer comes equipped with a lint trap inside, we have installed a secondary lint trap which is attached to the booster fan above the dryer. We recommend that you clean the primary lint trap after each use and clean the secondary lint trap (shown below) **minimum once per week or as required**.

1 How to Clean Secondary Lint Trap:

1. Slide the lint trap from the top of the dryer.
2. Gently wipe down the dust accumulated on the trap filter using a soft brush or a vacuum cleaner.
3. Reinstall lint trap back into tracks. Ensure it is properly aligned and seated.

Booster Fan Secondary Lint Trap



Booster Fan Secondary Lint Trap




2 How to Clean Primary Lint Trap:

1. Remove the lint filter by pulling it up and open the filter.
2. Clean lint fibers by hand or with vacuum cleaner.
3. Close the filter and put it back in place.

Primary Lint Trap



Primary Lint Trap Cleaning

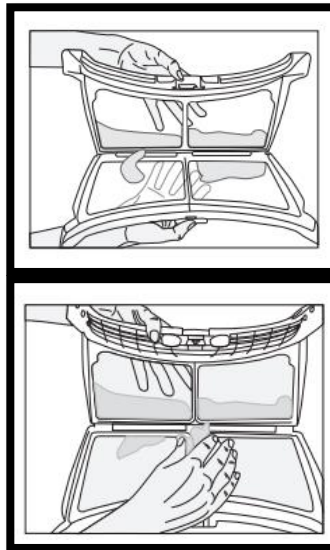

3 General Requirements:

1. Please make sure the booster fan switch is always on.
(Note: Booster fan keeps operating 5 – 10 minutes after Dryer finish its session.)
2. The door to the laundry closet must be opened while the appliances are running.

Booster Fan Switch – Leave on



Keep Laundry Door Open



Please read these guidelines thoroughly to ensure that you know how to safely and efficiently operate the extensive features and functions of your new appliance. **Refer to the Manufacturer Manual for the full Maintenance and Troubleshooting Steps provided in the Home Owner Package.** Thank you for your cooperation!

Dishwasher Operation and Maintenance Guidelines


GILMORE
PLACE

1 Removing and Cleaning Filters:

Dishwasher require cleaning of the filters **at least once a week** in order for the machine to operate efficiently.

1. Turn the micro filter and coarse filter assembly counterclockwise and pull it out from its seating.
2. Pull out the metal / plastic filter from the seating.
3. Press the two pawls on the coarse filter inwards and separate the coarse filter from the assembly.
4. Clean all three filters under tap water with a brush.
5. Replace the metal/plastic filter.
6. Place the coarse filter into the microfilter. Make sure that it is properly seated. Turn the coarse filter clockwise until a "click" sound is heard.
7. Do not use the dishwasher without a filter.
8. Incorrect placement of the filters will reduce washing efficiency.

Filter Removal

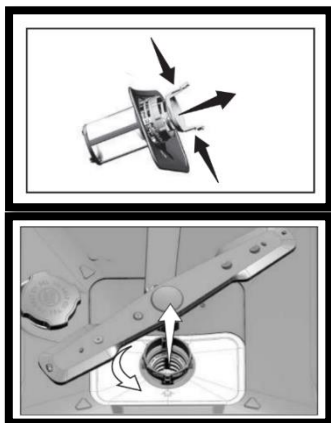


Make sure the filter is properly seated



3 General Notes:

1. **ProCare Program** – is recommended to be operated on **each 1-2 months** for machine cleaning and necessary hygiene. The Program should be operated while the machine is **empty**.
2. Keep the door of the Dishwasher open after washing session is completed.

ProCare Program

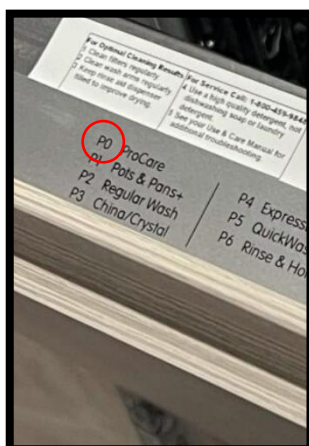

Leave Door Open



Please read these guidelines thoroughly to ensure that you know how to safely and efficiently operate the extensive features and functions of your new appliance. **Refer to the Manufacturer Manual for the full Maintenance and Troubleshooting Steps provided in the Home Owner Package.** Thank you for your cooperation!



2 Soup Usage Requirements:

1. Only use in the machine the detergents produced particularly for use with dishwashers.
2. We highly Recommend using **HE Detergents** for your machine.
3. Put suggested amount of powder, liquid/gel or tablet detergent in the reservation showcased on the photo below.
4. Push the lid of the detergent dispenser to close it. A "click" will be heard when the lid is closed.

HE Detergent



Detergent Dispenser

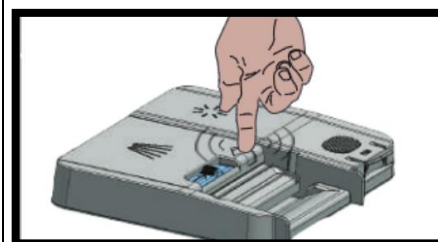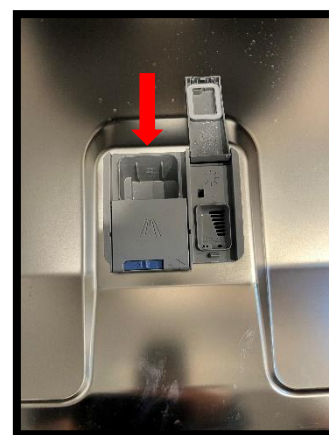


Cooktop Maintenance Guidelines

1 General Notes:

Use the right front, right rear or left rear burners for simmering, or for simmering, or for cooking smaller quantities of food requiring small cookware. Use the left front POWER Burner for bringing liquids to a rapid boil or cooking large quantities of food.

Cooktop Layout:


1. DOUBLE CROWNS (700 to 18,000 Btu/h burner & control knob)
2. SR (1,300 to 6,300 Btu/h burner & control knob)
3. R (2,200 to 12,000 Btu/h burner & control knob)
4. AUX (1,000 to 4,000 Btu/h burner & control knob)

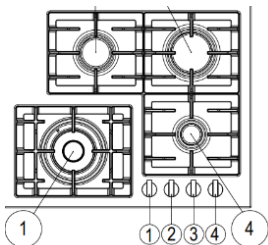

Cooktop Layout



Control Panel

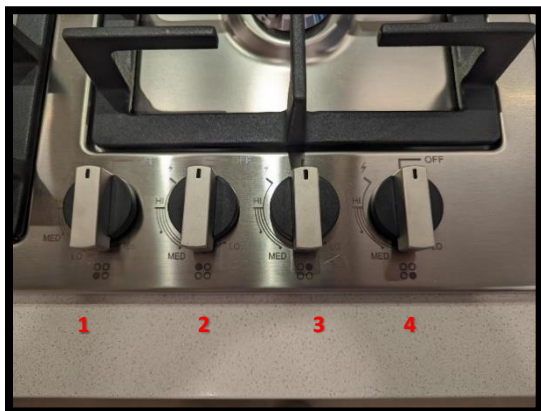


2 Cleaning and Maintenance:

General Cleaning the Cooktop Surface

The entire Cooktop can be safely cleaned by wiping a soapy sponge, then rinsing and drying. If stubborn soil remains, follow the recommended cleaning methods below. Please exercise **caution** when cleaning the Cooktop.

1. Before cleaning, be certain the burners are turned off and the grates are cool.
2. Always use the mildest cleaner that will do the job.
3. Use clean, soft cloths, sponges, or paper towels.
4. Rub stainless steel finishes in the direction of the grain. Wipe area dry to avoid water marks.
5. Do not clean removable cooktop parts in any self-cleaning oven.
6. After cleaning, place all parts in their proper positions before using cooktop.

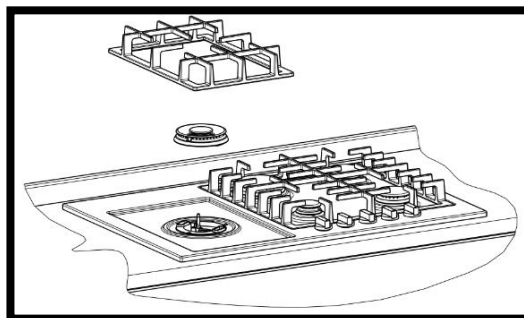

The Burner Flames

Turn each burner on. Flames should be blue in color with no trace of yellow. The burner flames should not flutter or blow away from the burner. The inner core flame should be between ½" and ¾" long.

IMPORTANT: Do not obstruct the flow of combustion and ventilation air around the burner grate edges.

Please read these guidelines thoroughly to ensure that you know how to safely and efficiently operate the extensive features and functions of your new appliance. **Refer to the Manufacturer Manual for the full maintenance and troubleshooting steps provided in the Welcome Package.** Thank you for your cooperation!