

# INSTALLATION MANUAL DAF NGD SUNVISOR



Sunvisor DAF XF/XG/XG+



# INSTALLATION MANUAL DAF NGD SUNVISOR

REMOVE THE SILVER DECOR STRIP AT THE TOP OF THE SUNVISOR, BY UNDOING THE CLIPS ON THE INSIDE OF THE SUNVISOR.



REMOVE THE DECOR STRIP. UNDO THE 10 MOUNTING SCREWS WITH A TORX 30 SCREWDRIVER  
IN TOTAL : 6 CENTRE BOLTS AND 4 OUTER BOLTS ( 2 LEFT, 2 RIGHT )



REMOVE THE ORIGINAL SUNVISOR COMPLETELY FROM THE TRUCK. REMOVE THE ORIGINAL BRACKETS FROM THE CABIN, SO ONLY THE MOUNTING POINTS ARE VISIBLE

# INSTALLATION MANUAL DAF NGD SUNVISOR



REMOVE THE 3 CENTRE BRACKETS



REMOVE THE 2 OUTER BRACKETS ( LEFT & RIGHT )

THE NEW SUNVISOR COMES WITH PRE BONDED BRACKETS 3 IN THE CENTER, 2 AT THE SIDE

# INSTALLATION MANUAL DAF NGD SUNVISOR



MIDDLE BRACKETS



SIDE BRACKET

# INSTALLATION MANUAL DAF NGD SUNVISOR



THE BRACKETS ARE CABIN SPECIFIC ( LEFT XG+ ) ( RIGHT XF/XG )  
THE XG+ BRACKETS WILL NOT FIT THE XF/XG AND VICE VERSA



USE THE PROVIDED RUBBERS, THESE GO INBETWEEN THE BRACKETS AND THE CABIN

# INSTALLATION MANUAL DAF NGD SUNVISOR




USE THE MOUNTING MATERIAL PROVIDED.



USE THE PROVIDED WASHERS

# INSTALLATION MANUAL DAF NGD SUNVISOR

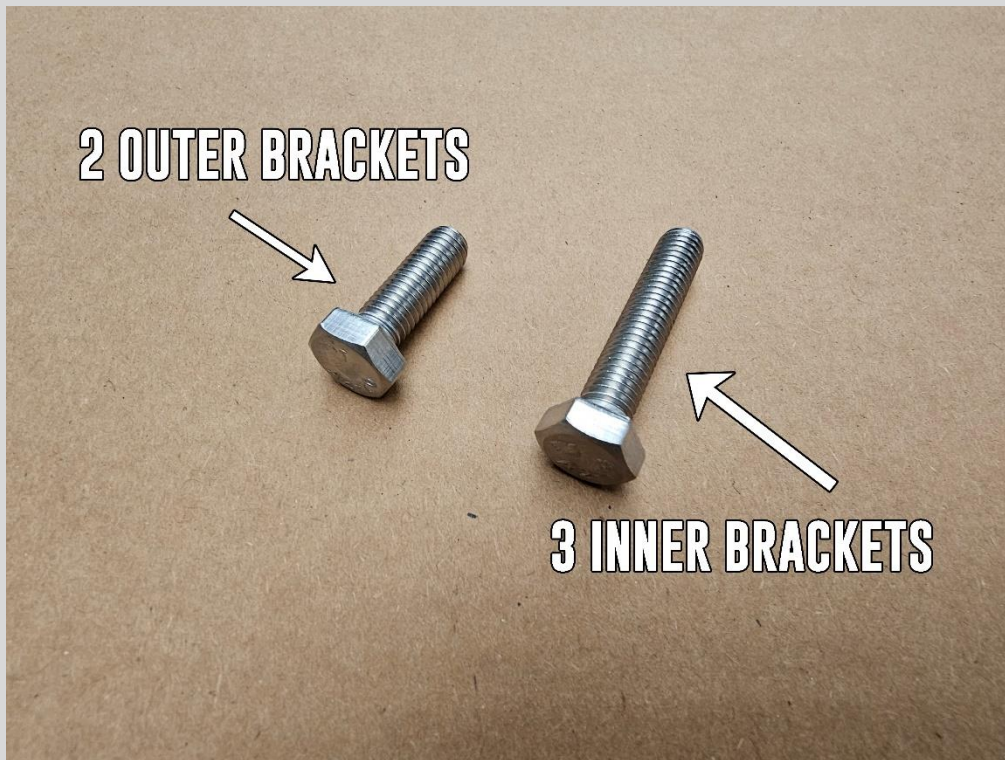

MOUNT THE SUNVISOR BACK ON THE CABIN. USING THE ORIGINAL MOUNTING MATERIAL

# INSTALLATION MANUAL DAF NGD SUNVISOR

MATERIAL PROVIDED :

SUNVISOR

RUBBERS (3 INNER + 2 OUTER)

MOUNTING MATERIAL (WASHERS AND BOLTS)

PLEASE NOTE, THE BRACKETS ARE SPECIFIC PER CABIN TYPE.

XF/XG USE THE SAME BRACKETS

XG+ HAS SPECIFIC BRACKETS ALWAYS TEST

FIT BEFORE PAINTING.

**Solar**  
SOLARGUARD.NL **Guard**

EXCLUSIVE TRUCK PARTS