

Installation guide Volvo FH Aero Integration Kit for the Lower Grille



1. First, the lower grille where the lights go must be removed from the car. You do this by flipping open the lower grille and loosening the bolts so that the grille can be detached.




2. Once the bottom grille of the Aero has been removed, the grill bars can be sawn out. This creates space for the included covers into which the lights fit.



3. Once you have sawed out the bars on both sides, it is important to smooth the entire surface so that the light housing fits into the grill.



4. Next, take the included covers, assemble them, and mount them on the grill. Once they are properly seated, we recommend tightening a small screw on both sides to secure them.

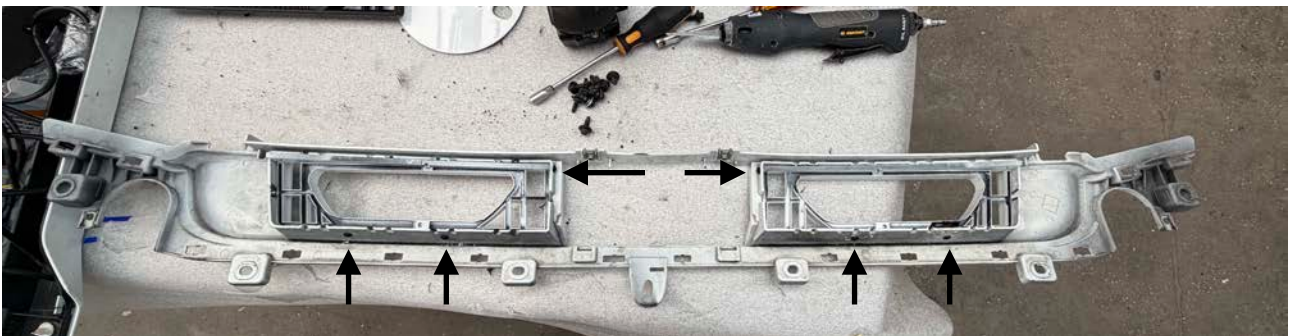

5. Now take the steel brackets. The two bolt holes align exactly with the mounting points on the Aero itself. You can also use the bolts you had to loosen earlier for this. Then attach the bracket so that the upright flaps where the lights will sit are facing upwards. Next, you can mount the lights onto the large bracket using the small brackets provided.



6. Once the lights are mounted with the brackets, you can take the lower grille and re-mount it on the Aero. The covers will fit nicely over the lights. If the lights don't fit properly, you can always adjust them using the small bolts on the back of the light.

The power cables can be connected according to Volvo regulations.

If everything fits properly, you are ready to go!

